ARAT Telephone mount

Type: NEW MINI
(for cars with glove compartment)

Part No: 1307.1

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

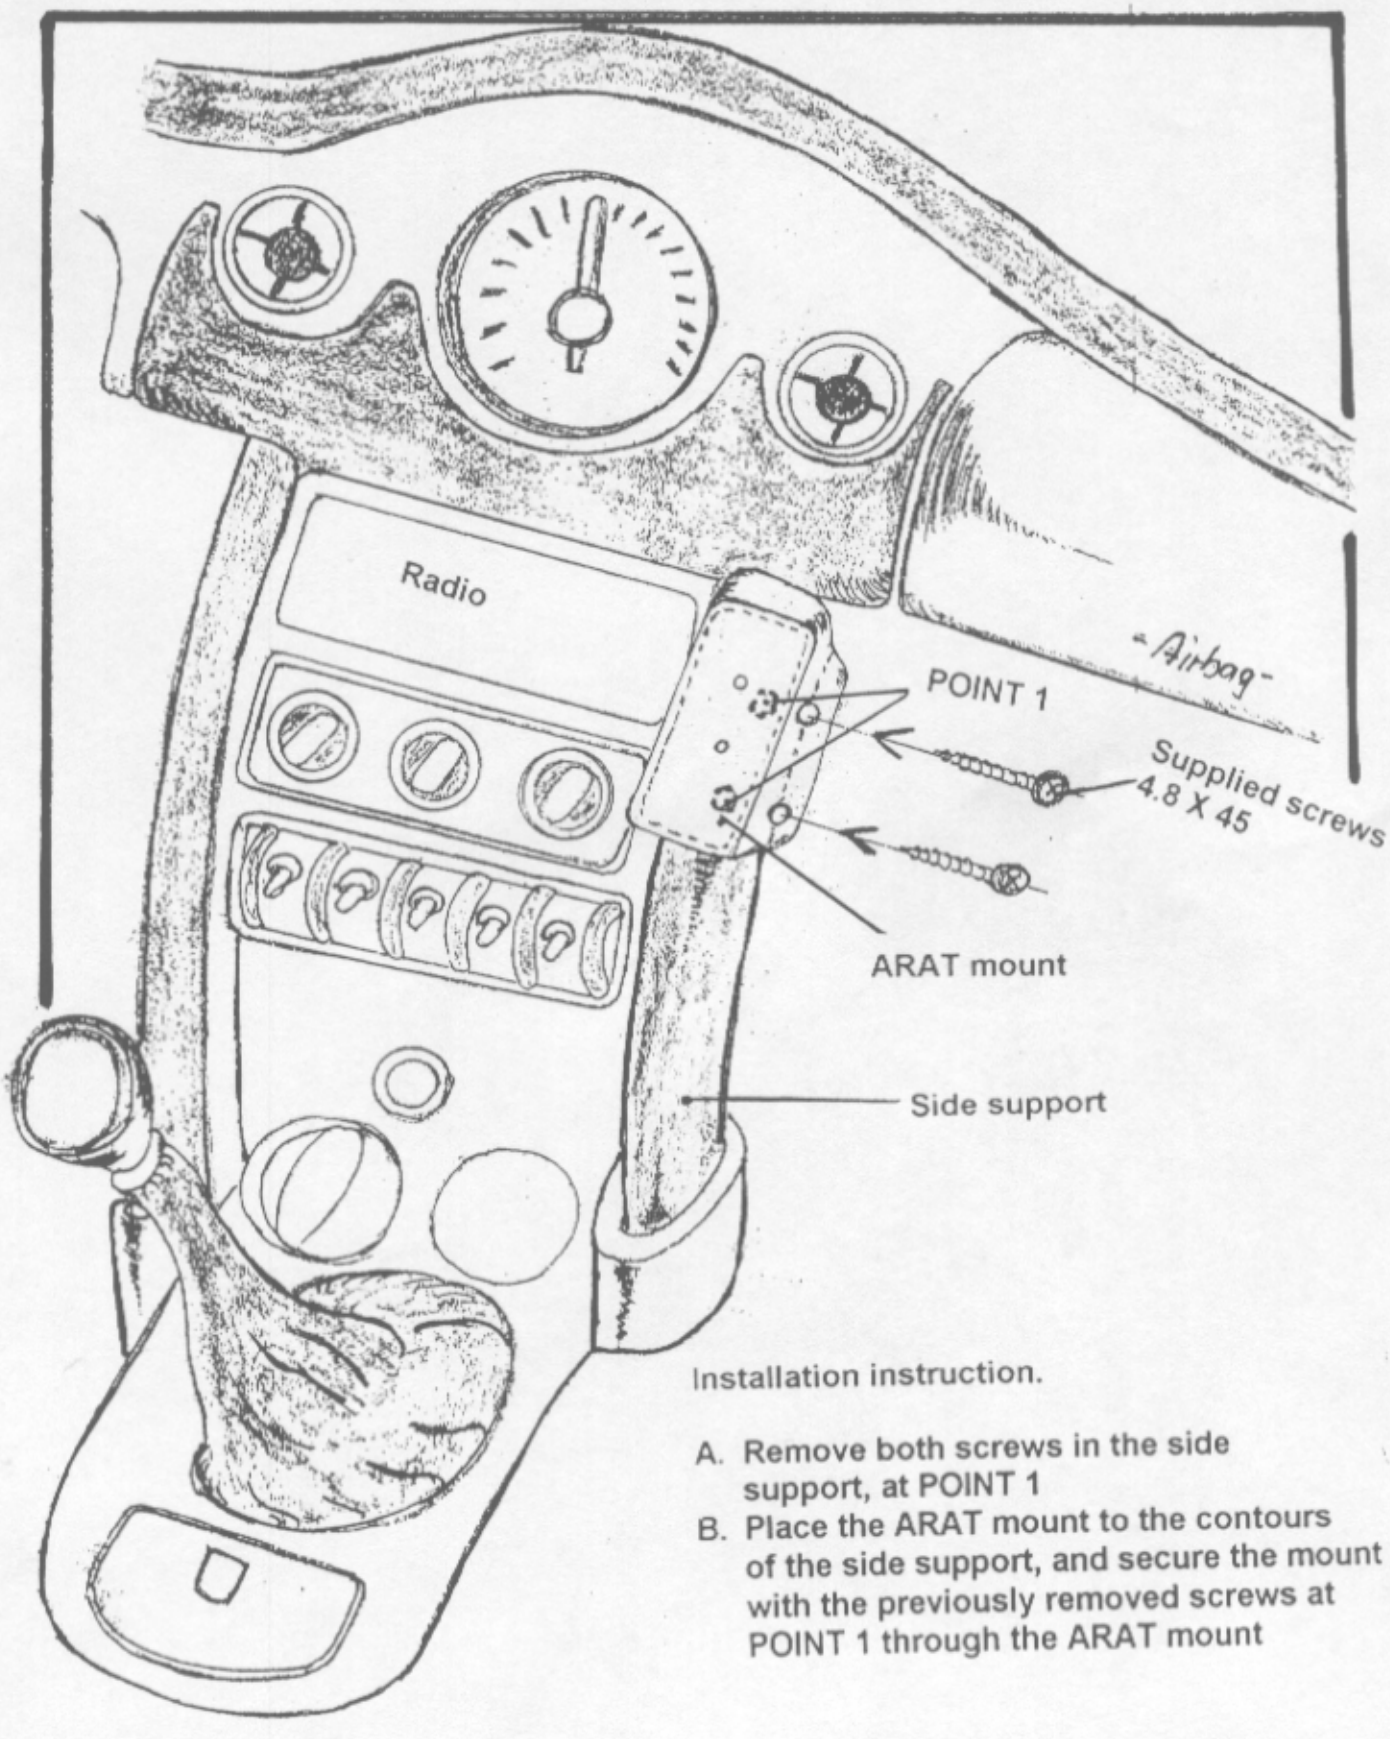

Installation instruction.

A. Remove both screws in the side support, at POINT 1
B. Place the ARAT mount to the contours of the side support, and secure the mount with the previously removed screws at POINT 1 through the ARAT mount